



TENSION DEVICE


INSTALLATION INSTRUCTIONS

Rollashade.com
info@rollashade.com
951.245.5077


© Copyright Roll-A-Shade® Inc. All Rights Reserved.



HARDWARE INCLUDED



Tension Device + Chain

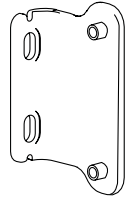

Tension Device Bracket




Short Screws




Screws

TOOLS REQUIRED




3/8" Hex Head



Phillips Head




1/8" Drill Bit



Drill

INSIDE OR OUTSIDE APPLICATION

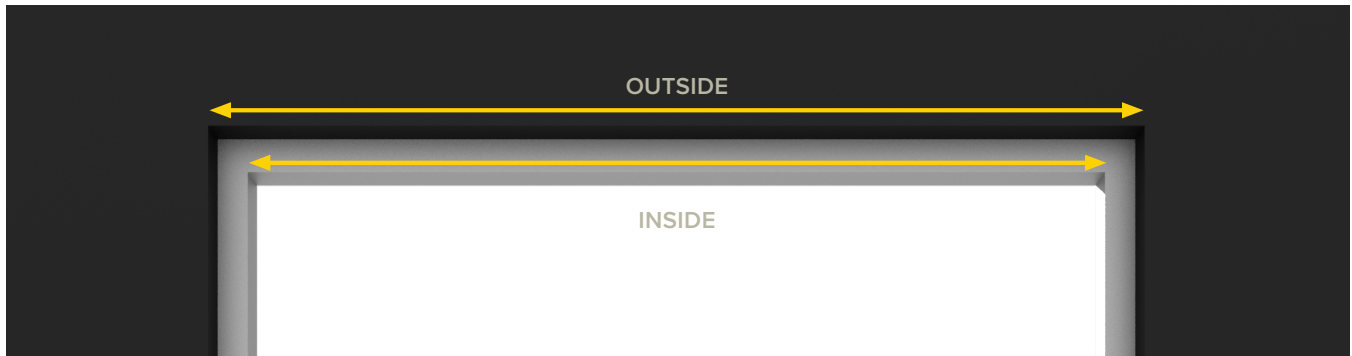

INSIDE




OUTSIDE

INSIDE MOUNT & TENSION DEVICE INSTALLATION

Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall.

A

KEEP
TENSION

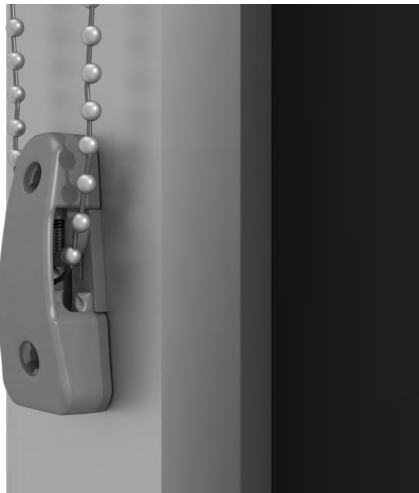

B



C

SECURE
TENSION
DEVICE




NOTE: Please make sure shade operates smoothly.

OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws.


A

PULL CHAIN
DOWN &
MARK
LOCATION

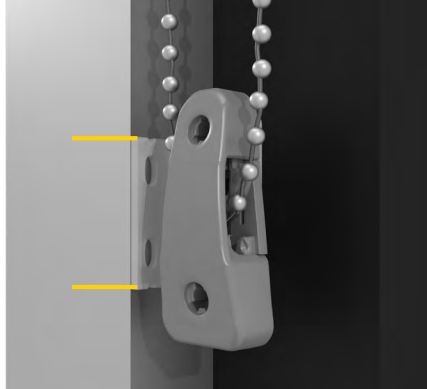


B


REMOVE
TENSION
DEVICE
& DRILL

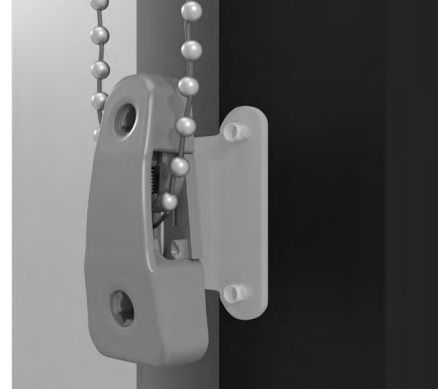

C

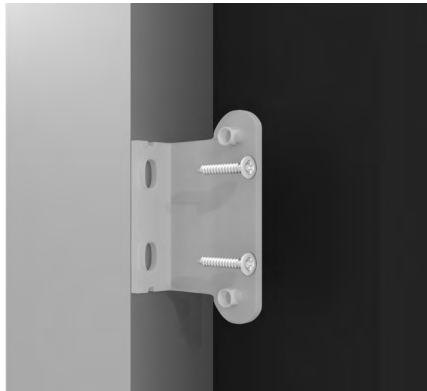

D

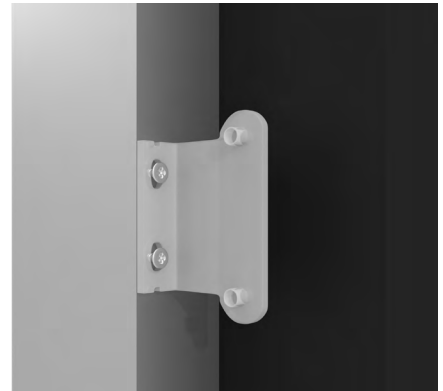


E

PLACE
TENSION
DEVICE ON
BRACKET



F

SECURE
TENSION
DEVICE

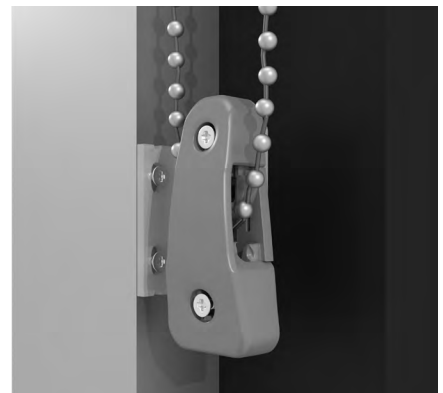

NOTE: Please make sure shade operates smoothly.